

INCLUDED WITH KIT

- 1) Culti-packer
- 2) Culti-packer Frame
- 3) Winch Assembly
- 4) Winch Cable
- 5) Roller Assembly



STEP ONE

Remove bolts, washers and taps from two long arms of Culti-packer frame.




STEP TWO

Attach Culti-packer frame to disc frame using bolts, washers and taps removed in step 1.



STEP THREE

Align Culti-packer with frame and attach using supplied bolts, washers and taps.

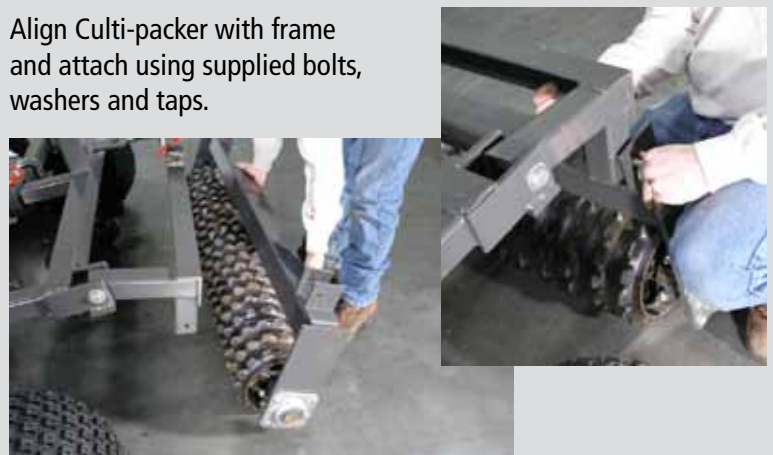

STEP FOUR

Place winch stand on tongue, just behind front bracing, with two supplied U-bolts, washers and taps.



STEP FIVE

Tighten bolts on all assembled frames with two adjustable wrenches or with 3/4" open wrenches. Do not overtighten to allow Culti-packer assembly to move easily.



STEP SIX

Place cable roller in the middle upright brace on the main frame using supplied bolts, washers and taps. Tighten with two adjustable wrenches or with 3/4" open wrenches.



STEP SEVEN

Thread cable through center hole in winch so that cable travels inside the winch wind-up reel.



STEP EIGHT

Place cable on top of roller.



STEP NINE

Thread cable through welded metal loop on rear of Culti-packer frame and connect with wire clamp and 7/16" wrench.



STEP TEN

To lift Culti-packer, remove rear lock pin, flip small switch on winch in proper direction, and turn handle to tighten cable.



TARTER
FARM AND RANCH EQUIPMENT

WWW.TARTERFARMANDRANCH.COM